

San Diego Fire-Rescue Department

Motorola XTL 5000 (800 MHz) Mobile Radio Training



Objectives


- **Review basic operating features**
- **Learn how to navigate through channels and zones**
- **Learn how to build scanning lists**

Specifications & Features

Motorola XTL 5000 Digital Mobile Radio

- **512 Channel/32 radio zones capability**
- **Scan up to 16 channels only**
- **14 digit character display**
- **45 Watts power output**
- **Digital or analog operating system**


XTL 5000 MOBILE RADIO CONTROL HEAD

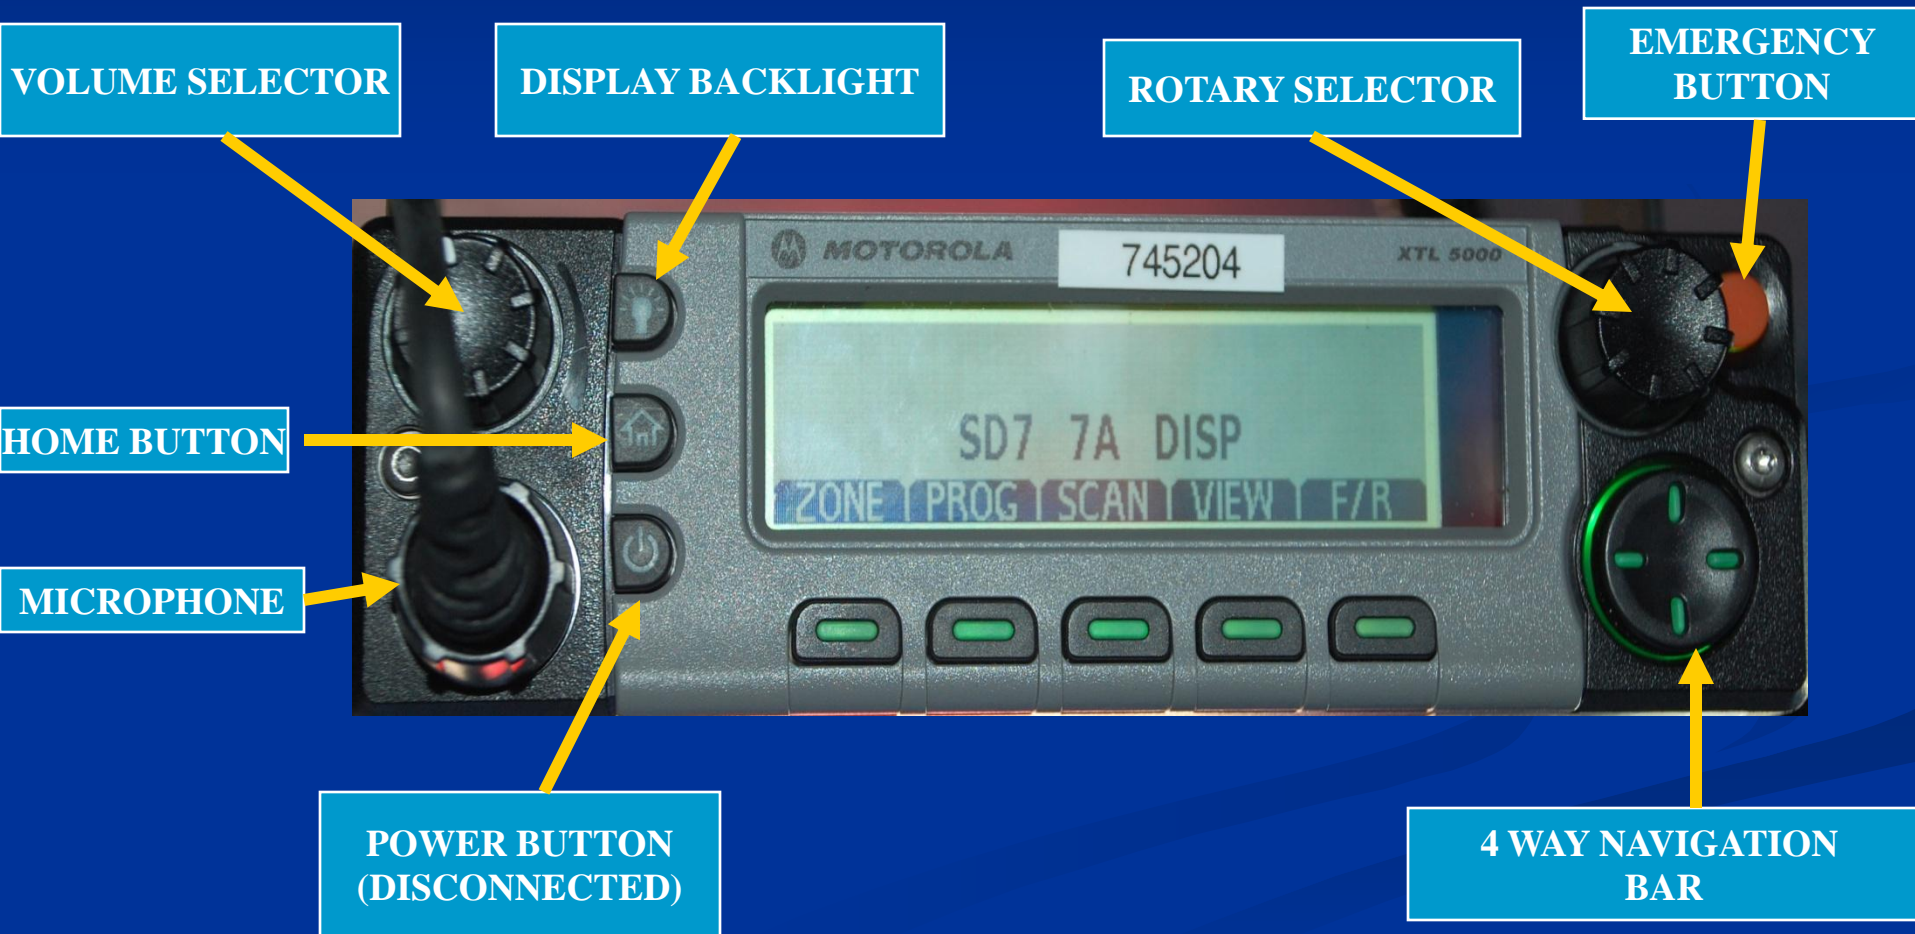

Motorola XTL 5000 Mobile Radio Operations

- **VOLUME SELECTOR:** Used to adjust radio volume.
- **DISPLAY BACKLIGHT:** Used to adjust the display brightness. There are three levels of intensity.
- **ROTARY SELECTOR:** Channel and zone selector.
- **EMERGENCY BUTTON:** Activates the emergency alert system. Hold down for 2 seconds to alert and hold down for 4 seconds to reset.
- **HOME BUTTON:** Used to go back to the departments selected Home channel (7A DISP), push and hold for one second and also as enter/confirm function.
- **MICROPHONE:** Microphone connector.
- **POWER BUTTON:** This button is disconnected. The radio turns on automatically once the apparatus electrical power is turned on.
- **4 WAY NAVIGATION BAR:** Used to navigate through zones when building a scan group only (USE THE ROTARY SELECTOR FOR NAVIGATING THROUGH CHANNELS AND ZONES).

XTL 5000 MOBILE RADIO CONTROL HEAD SOFT KEYS

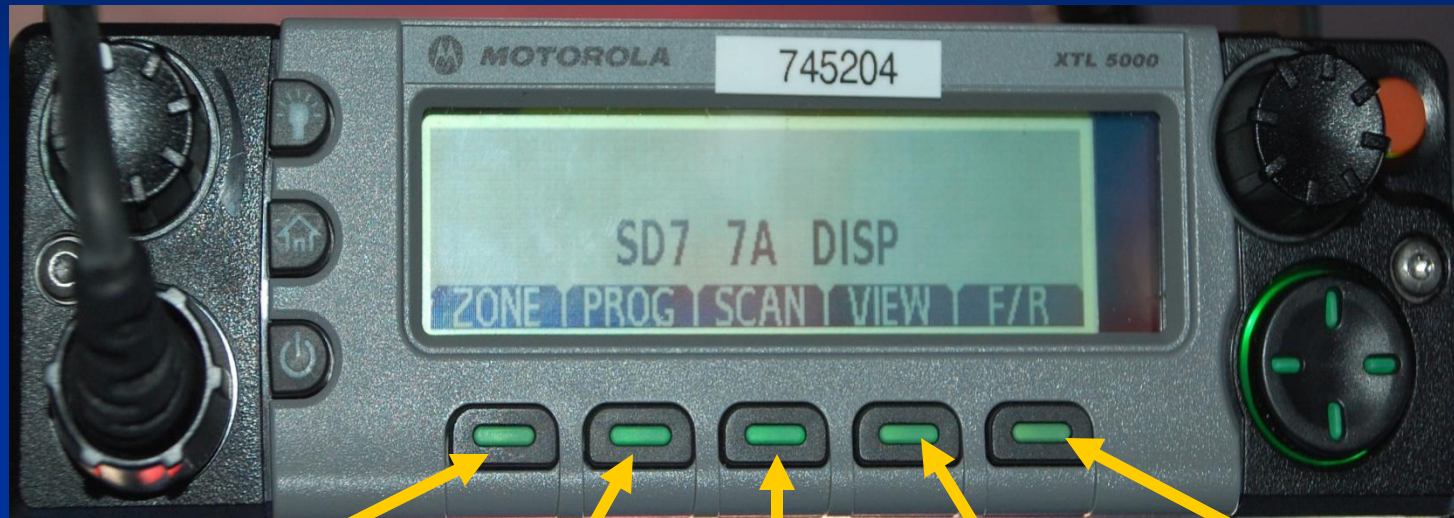

ZONE SOFT KEYS:
PRESS TO CHANGE
RADIO ZONE

SCAN SOFT KEYS:
PRESS TO TURN SCAN
ON/OFF

F/R SOFT KEYS:
FRONT/REAR RADIO
HEAD SELECTOR

PROGRAM SOFT KEYS:
PRESS TO ADD OR DELETE
SCAN CHANNELS

VIEW SOFT KEYS:
PRESS TO VIEW RADIO ID
AND VIEW SCAN LIST

Motorola XTL 5000 Mobile Radio Operations

SOFT KEYS: Used to activate display functions.

- **ZONE SOFT KEY:** Used to change radio zones.
- **PROGRAM SOFT KEY:** Used to program scan list.
- **SCAN SOFT KEY:** Used to turn scan on or off.
- **VIEW SOFT KEY:** Used to view radio ID and scan list.
- **F/R (FRONT/REAR) SOFT KEY:** Used to change radio operations from front to rear.

DISPLAY BRIGHTNESS AND CHANNEL CHANGING

DISPLAY BACKLIGHT:

1. PRESS BUTTON FOR DESIRED BRIGHTNESS (3 SETTINGS)

ROTARY SELECTOR: CHANNELS


1. ROTATE CLOCKWISE TO MOVE UP (A-P)
2. ROTATE COUNTER CLOCKWISE TO MOVE DOWN (P-A)



ZONE CHANGING

3 PRESS HOME BUTTON
KEY

2 TURN ROTARY KNOB
CLOCKWISE OR COUNTER
CLOCKWISE FOR DESIRED ZONE

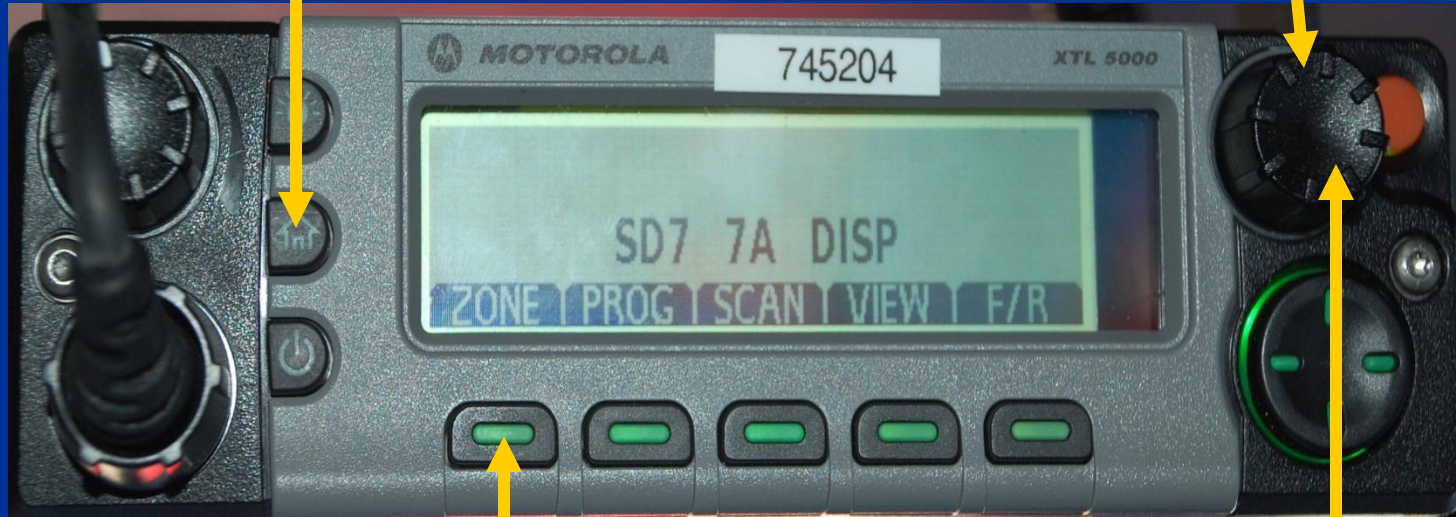

1 PRESS ZONE SOFT KEY

4 TURN ROTARY KNOB
CLOCKWISE OR
COUNTER CLOCKWISE
FOR DESIRED CHANNEL

SCANNING - ADDING OR DELETING



1 PRESS SCAN SOFT KEY
TO TURN SCAN OFF

2 PRESS PROG (PROGRAM)
SOFT KEY



3 PRESS SCAN SOFT KEY

SCANNING - ADD OR DELETE

5 TURN ROTARY KNOB CLOCKWISE OR COUNTER CLOCKWISE FOR DESIRED CHANNEL



4 USE NAVIGATION BAR (RIGHT OR LEFT HORIZONTAL BAR) TO PICK THE DESIRED ZONE

SCANNING - ADD OR DELETE

7 PRESS HOME BUTTON TO COMPLETE THE SCAN LIST AND RETURN TO THE HOME CHANNEL

8 ONCE COMPLETED YOU MAY REPEAT THE PROCESS STARTING IN A DIFFERENT ZONE



6 PRESS EITHER SEL OR DEL SOFTKEY TO ADD OR REMOVE THE DESIRED SCAN CHANNEL

NOTE: PRESS RCL (RECALL) SOFT KEY TO REVIEW PROGRAMMED SCAN CHANNELS