


# *Command Zone II (CZ) Reset*

- 1) The Job number is found on the engineer's pump panel near the Radio box door or the yellow sticker at your right foot when pulled to the seat base.
- 2) The Job #, is the password necessary to access the reset function.
- 3) The Job #, must be seven digits example (62983) is 6298300.
- 4) Press the second soft key from the left, at the bottom of the CZ display.
- 5) Then press the prognostic key on the screen.
- 6) Use the arrow keys positioned up and down, use the down arrow and highlight one of the numbers so it turns blue.
- 7) Once a number is highlighted blue, (press the reset on the screen and the white center button on the base of the CZ simultaneously) now you should see enter password.
- 8) The password is the Job number, as indicated already.
- 9) Once you've entered the password, use the reset and center white button to reset the numbers only. (You cannot reset text) not all the numbers will reset to 3000, a few will be greater than 3000.
- 10) You are on screen/page one, look to the left of the screen, you will see a down only arrow. Once you have reset the numbers, use the left down arrow to take you to the next screen/page, and do the same with these numbers.
- 11) Once you've reached the third screen/page, reset the numbers and once finished use the home key to take you out of the reset mode.
- 12) You have now reset the CZ and shouldn't have any warnings at this point.

**Call the shop if you experience a problem with this instruction.**

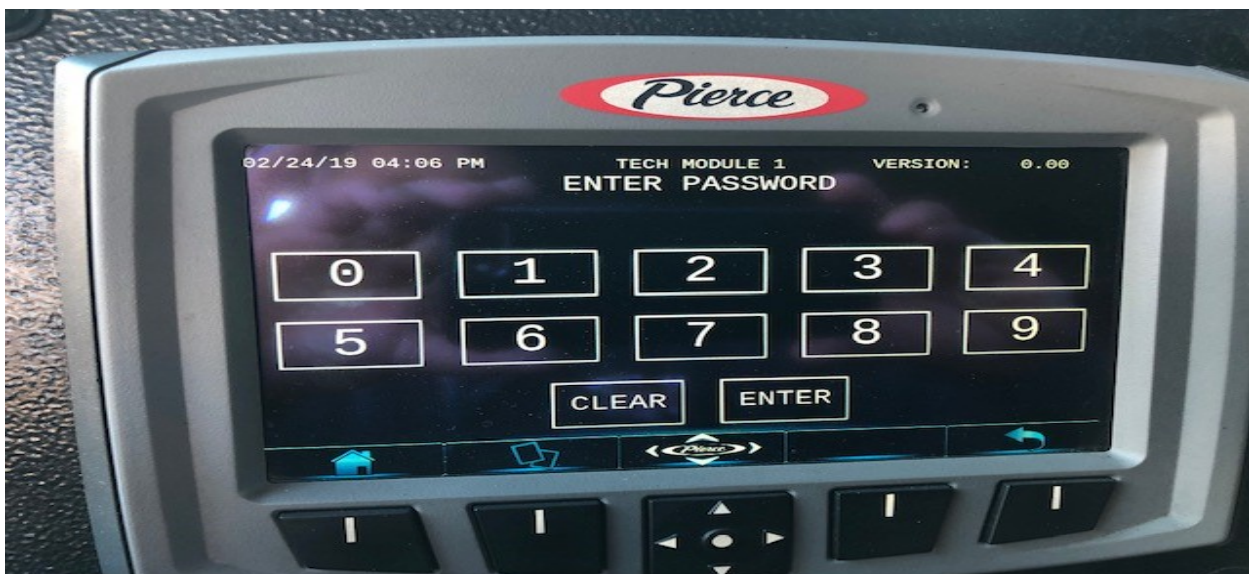

# Command Zone III (CZ) Reset

Go to Menu>Setup>Password = T3008300 (Example)

Password is T and complete JO# for all apparatus.

Then go to prognostics and the reset button will be there.

To reset a prognostic value:

- 1.) Highlight/scroll to the prognostic description (EXAMPLE: Cab pins).
- 2.) Press reset icon on screen and center directional button simultaneously.
- 3.) the value will reset (EXAMPLE: 3000).

Repeat steps 1-3 for all values that need reset.

When done, hit home button to exit. After next reset of batteries all functions will be normal.

\* \* \* It is only necessary to push RESET and CENTER DIRECTIONAL BUTTON SIMULTANEOUSLY when first entering the reset value screen/MODE, for all other value resets during that session just push reset icon wait 2/3seconds and that value will reset to 3000. \* \*

**Call the shop if you experience a problem with this instruction.**

