


Allison Transmission Service Wrench Reset

Prognostic Features

5th Generation Electronic Controls Shift Selectors display prognostics in text form to Provide at-a-glance status of Oil Life, Filter Life and Transmission Health.

The **WRENCH ICON** will illuminate briefly after you turn the key to the run position on your Allison-equipped vehicle to indicate that prognostics are enabled. If the **WRENCH ICON** remains on or flashes, this indicates there is a service issue relating to clutch, filter or fluid life.

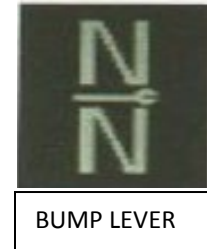

Resetting Prognostics



Oil Life Monitor

For either a push button or bump lever shift selector, press and hold the MODE button for approximately 10 seconds while in Oil Life Monitor Mode.

OR



For either a push button or bump lever shift selector perform the following shift sequence with the ignition on, but the engine off. Do not stop the sequence for more than three seconds once you have started

N-D-N-D-N-R-N

FILTER LIFE MONITOR



For either a push button or bump lever shift selector, press and hold the MODE button for approximately 10 seconds while in Filter Life Monitor mode.

OR




For either a pushbutton or bump lever shift selector, perform the following shift sequence with the ignition on, but the engine off. Do not stop the sequence for more than three seconds once you have started.

N-R-N-R-N-D-N

Transmission Health Monitor

This must be reset manually using Allison DOC# for PC diagnostic program after correcting a clutch system issue

Exit Prognostics



For a pushbutton shift selector, press the N(NEUTRAL) range button.



For a bump lever shifter, press the DIAGNOSTICS range button until back to range display.